


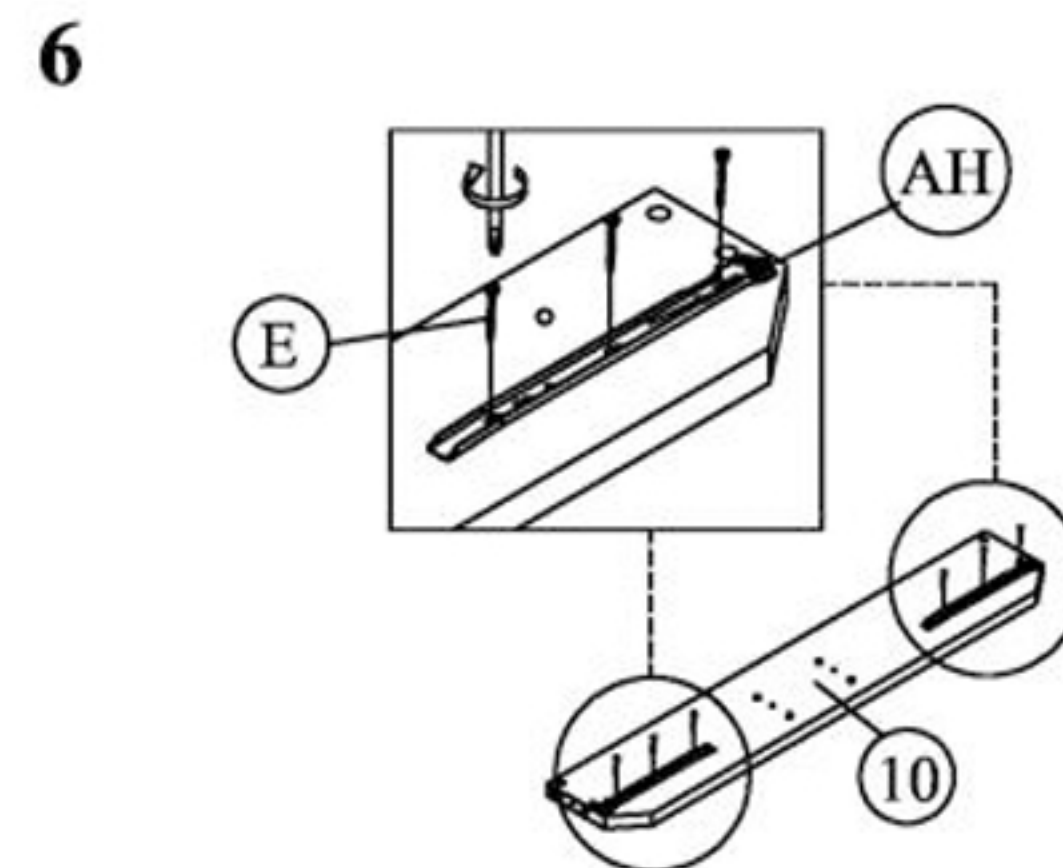
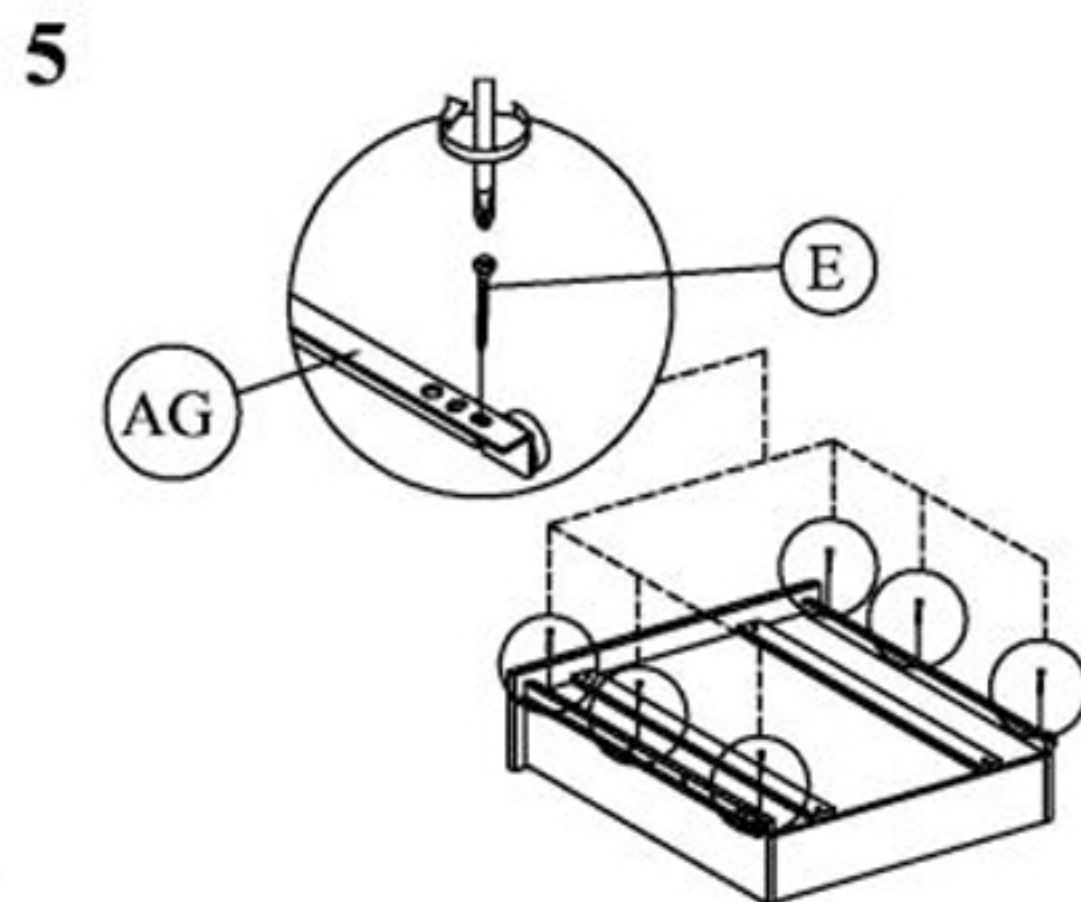
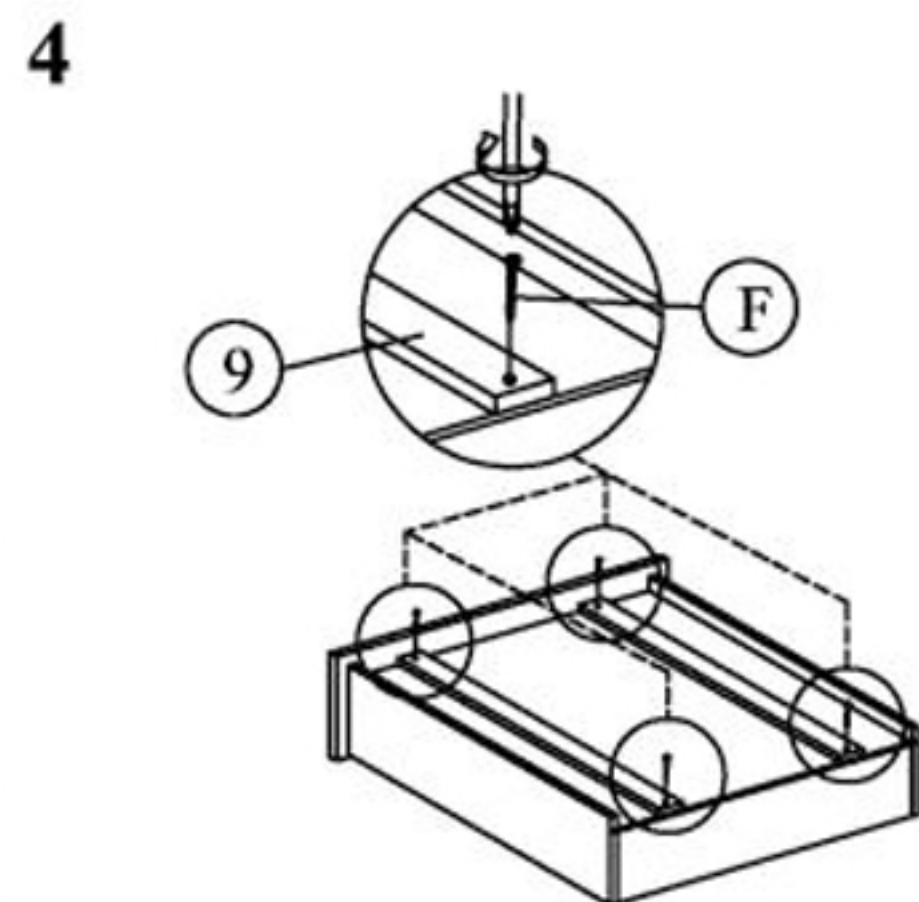
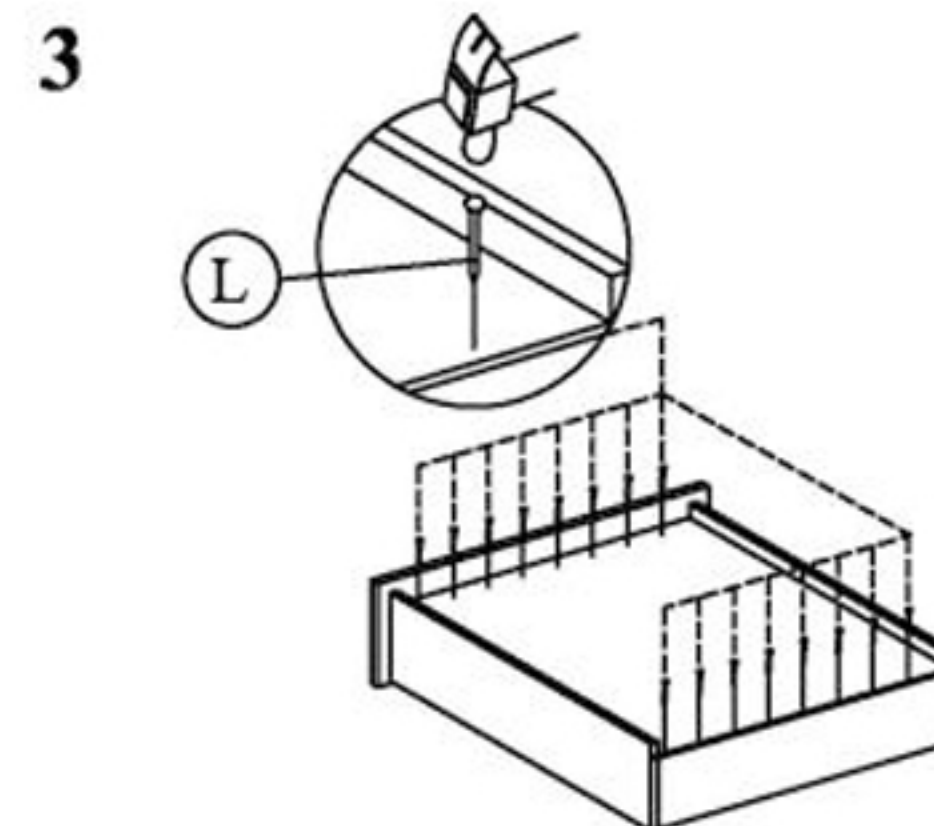


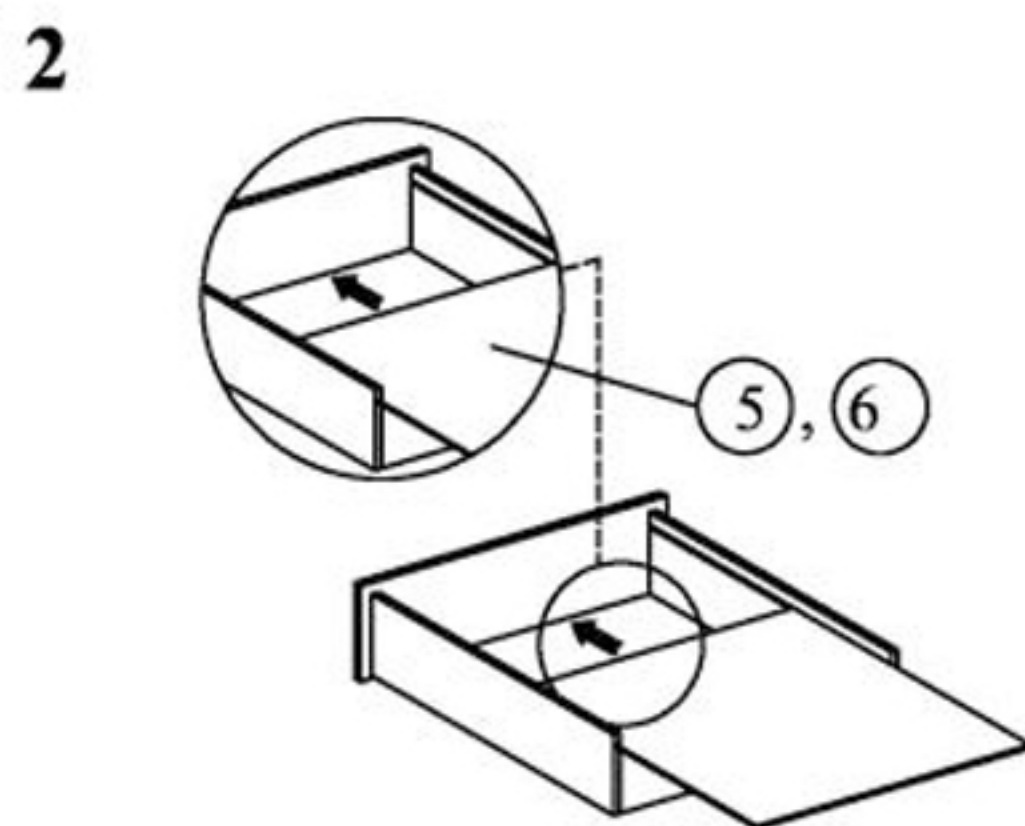


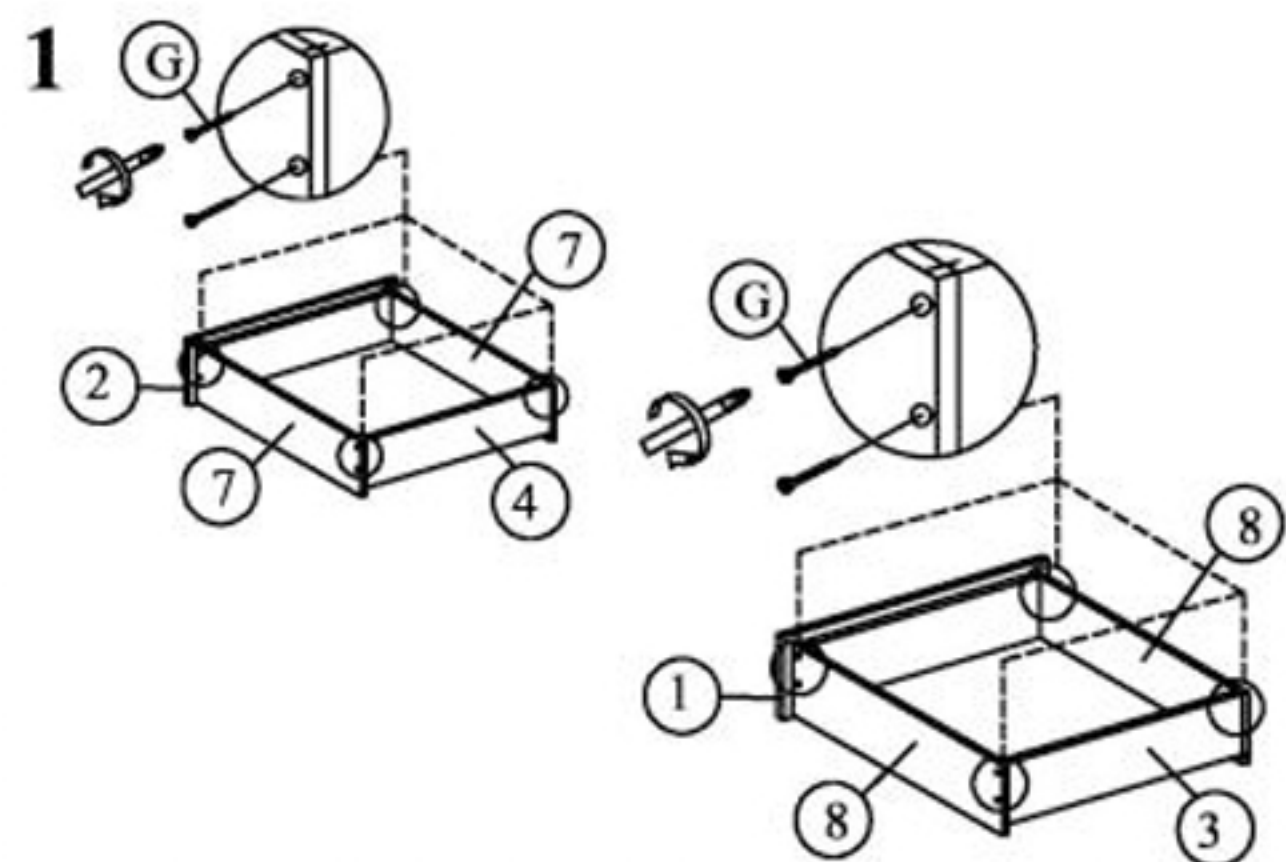


7

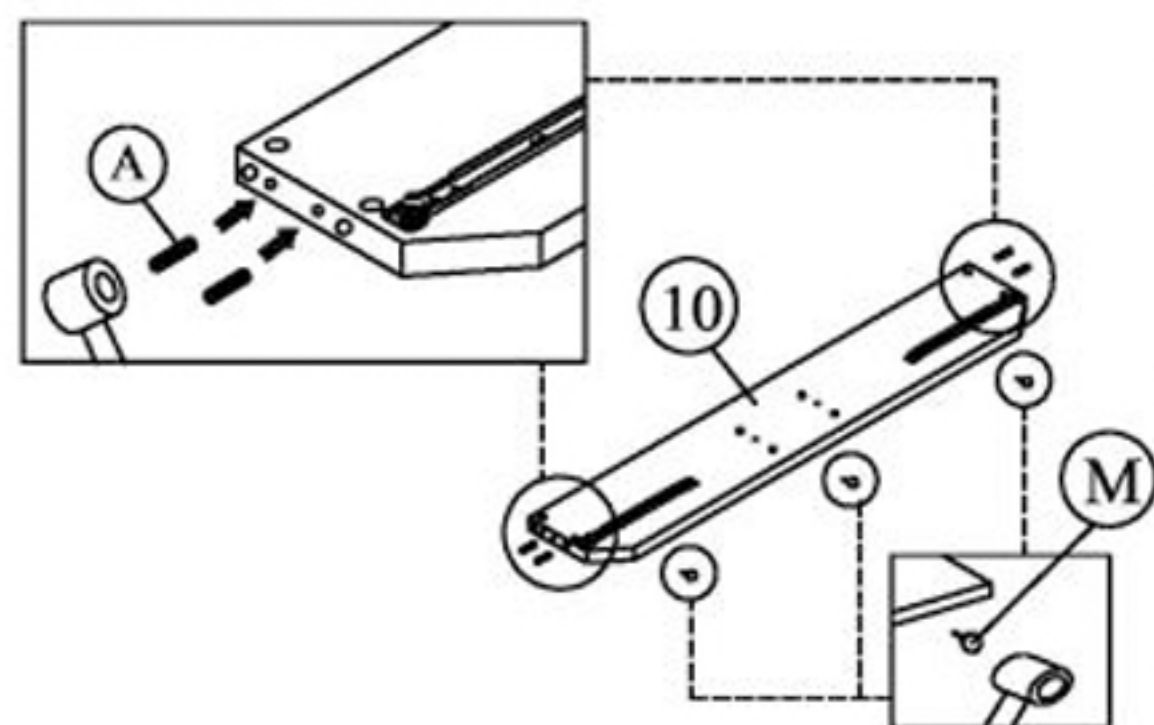


8

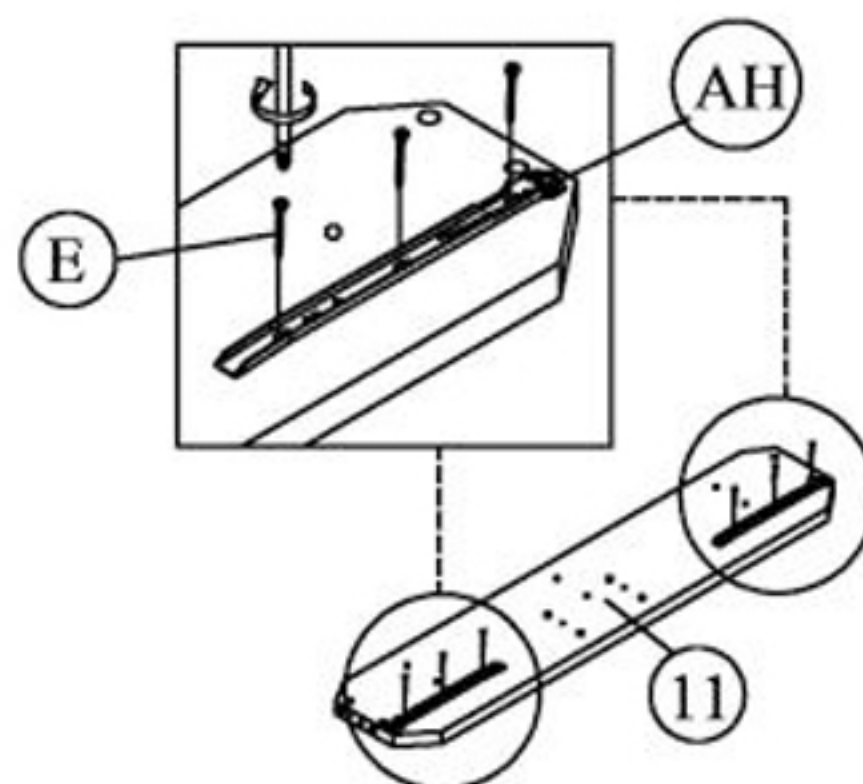


9

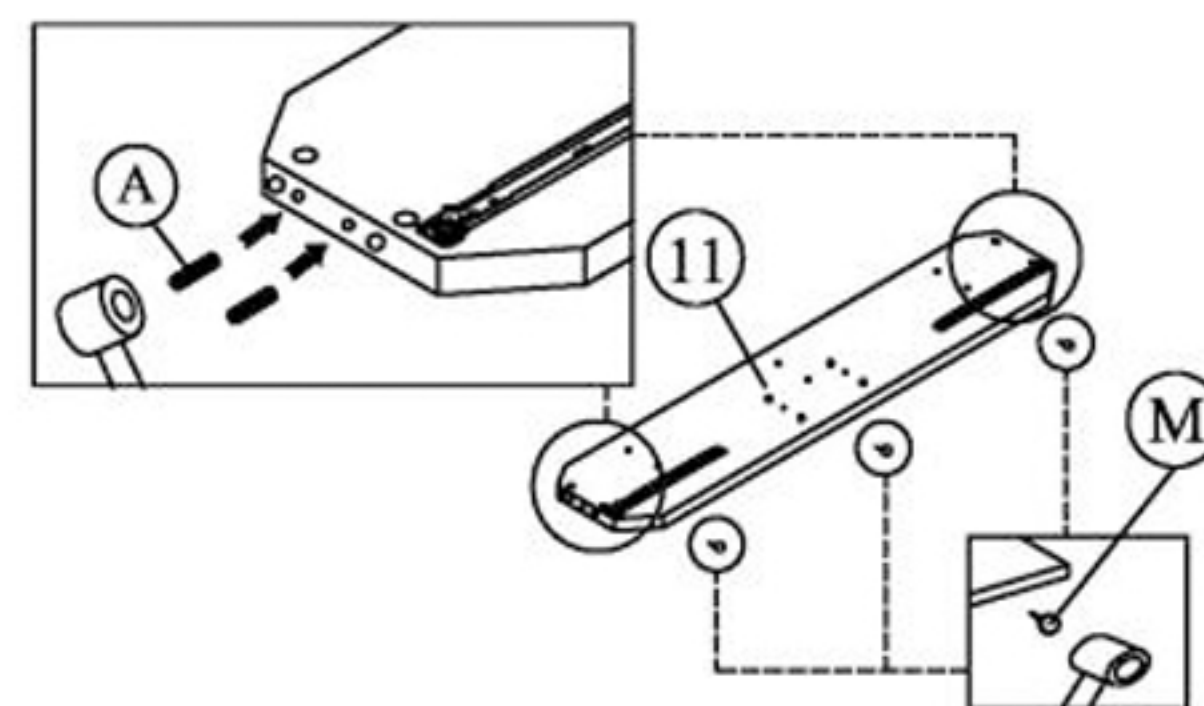


10

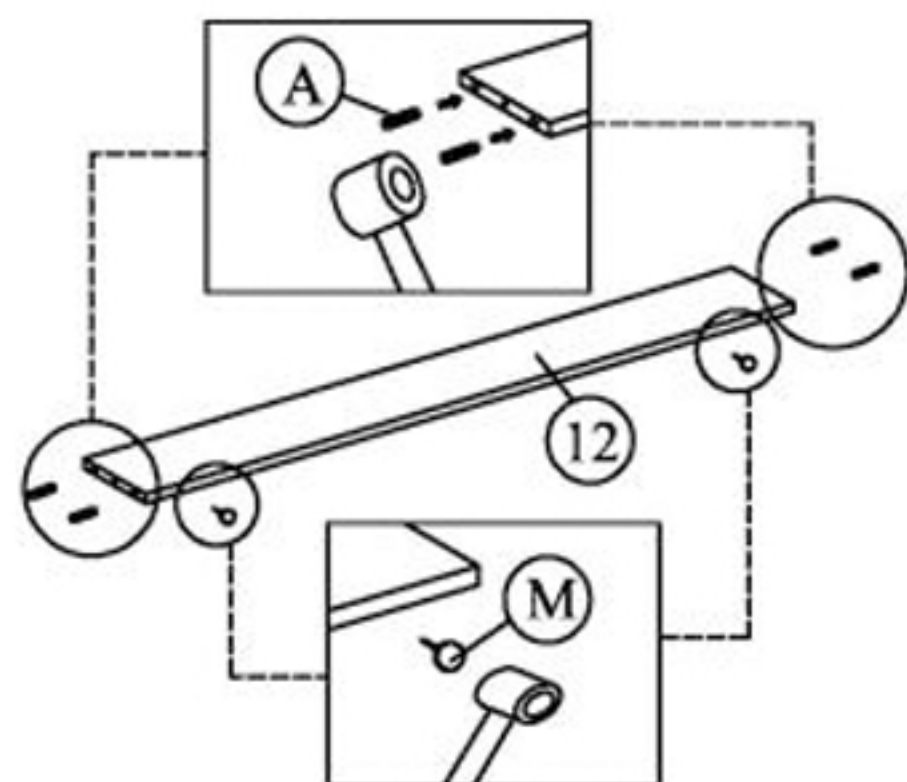


11

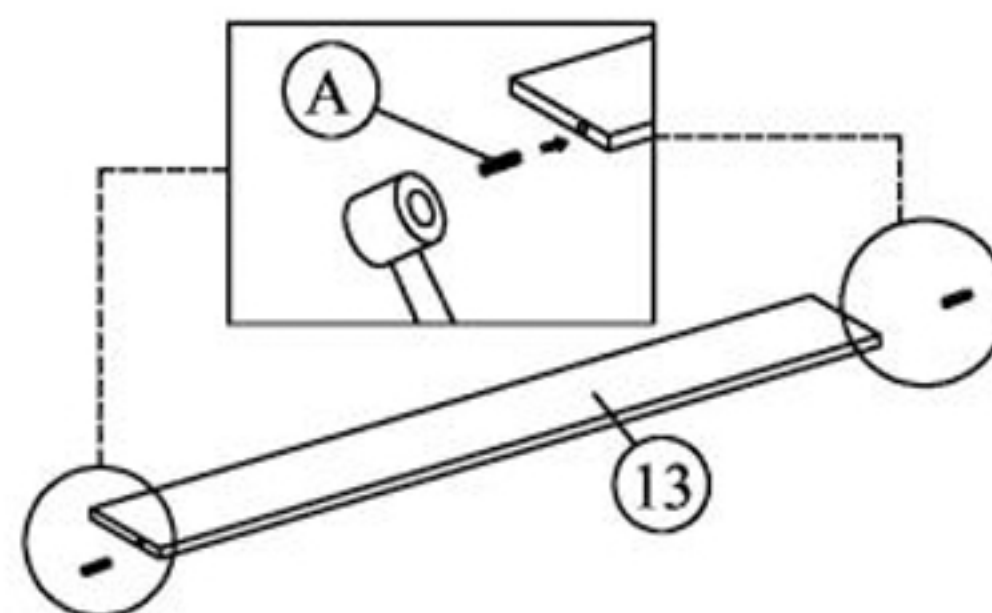


12

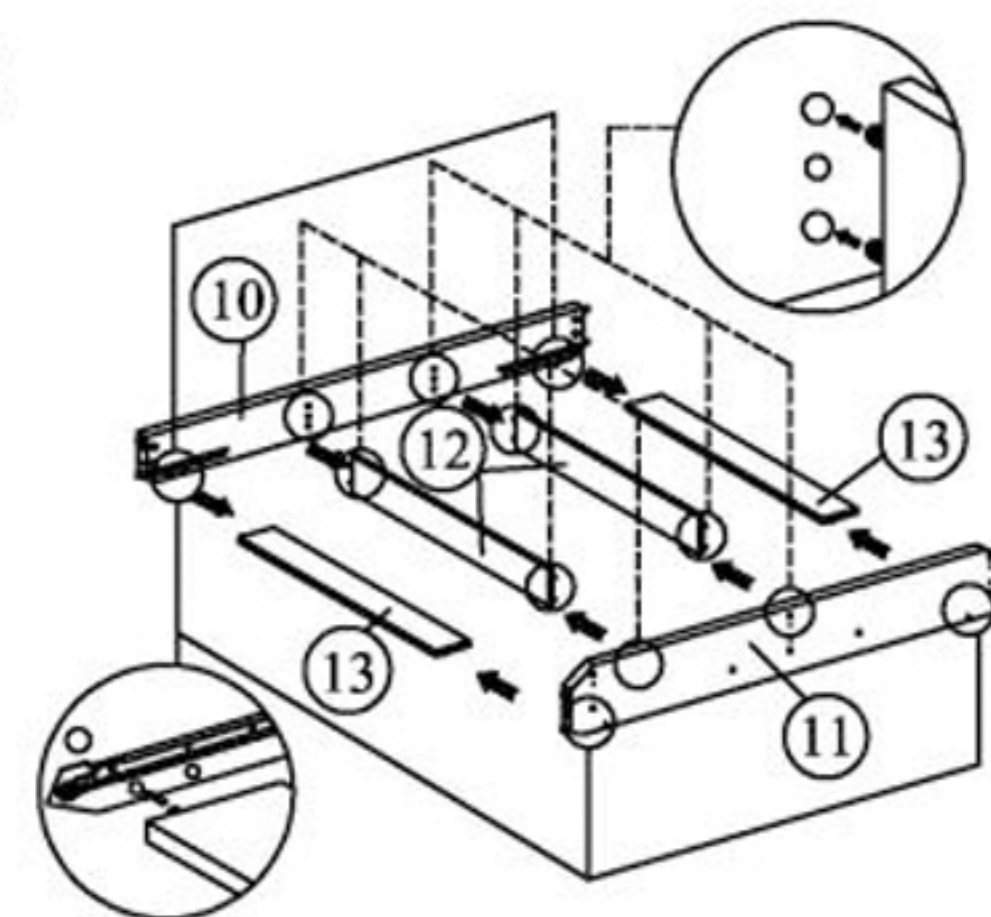


13

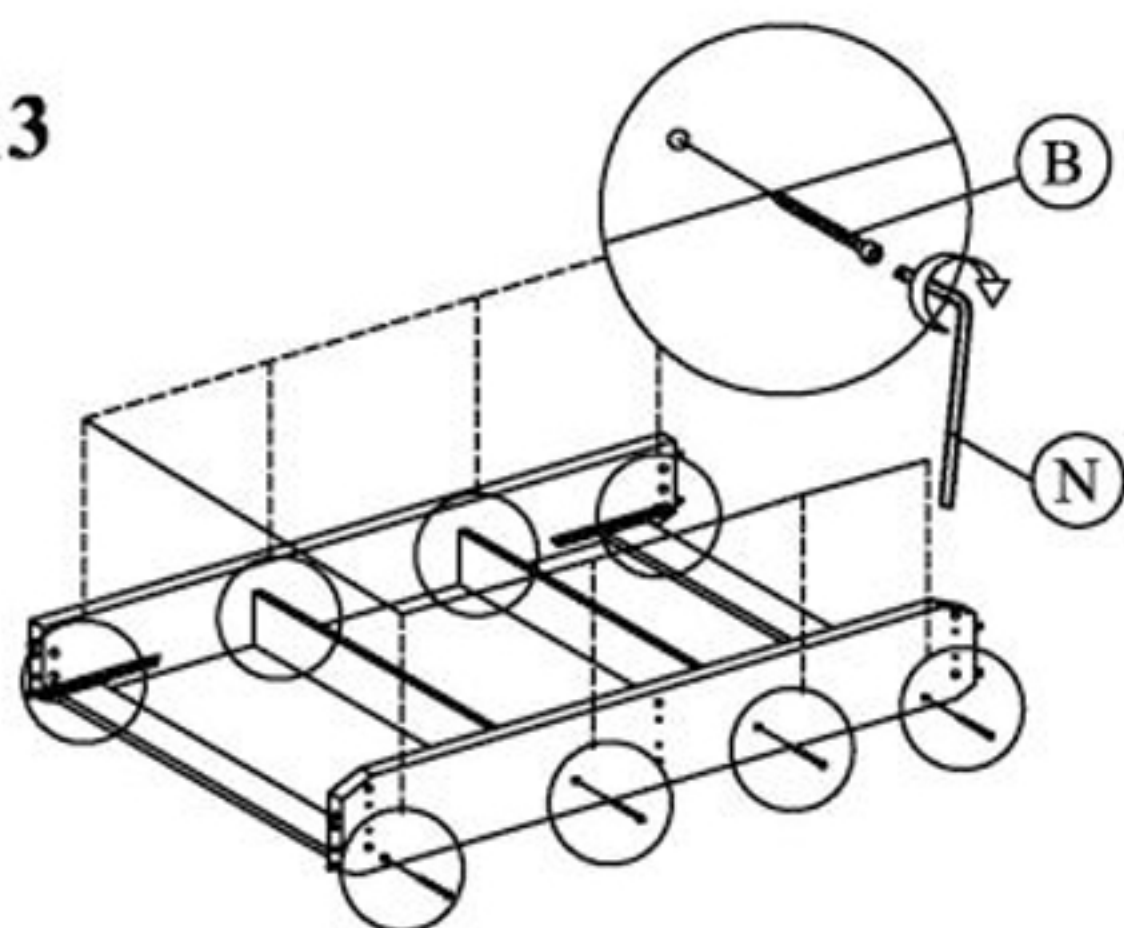

14

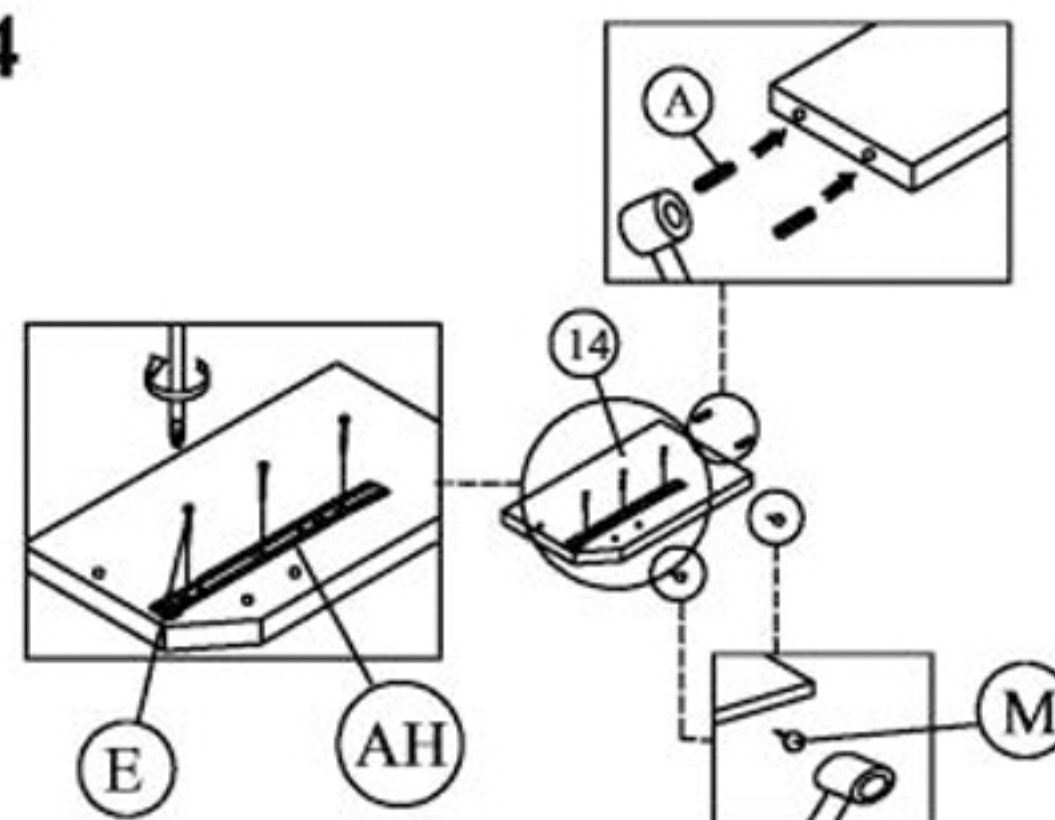


15

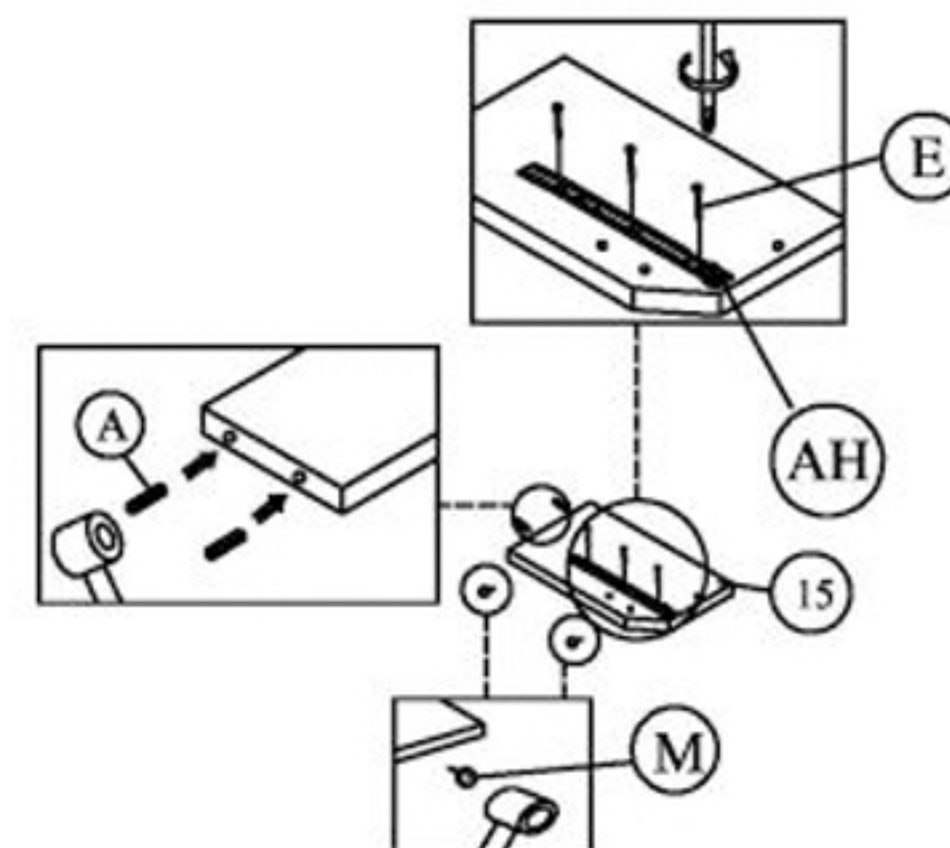


16


Attach (AH) to (16) and tighten it with (D), the flip (AH) to the other side and repeat the same step.

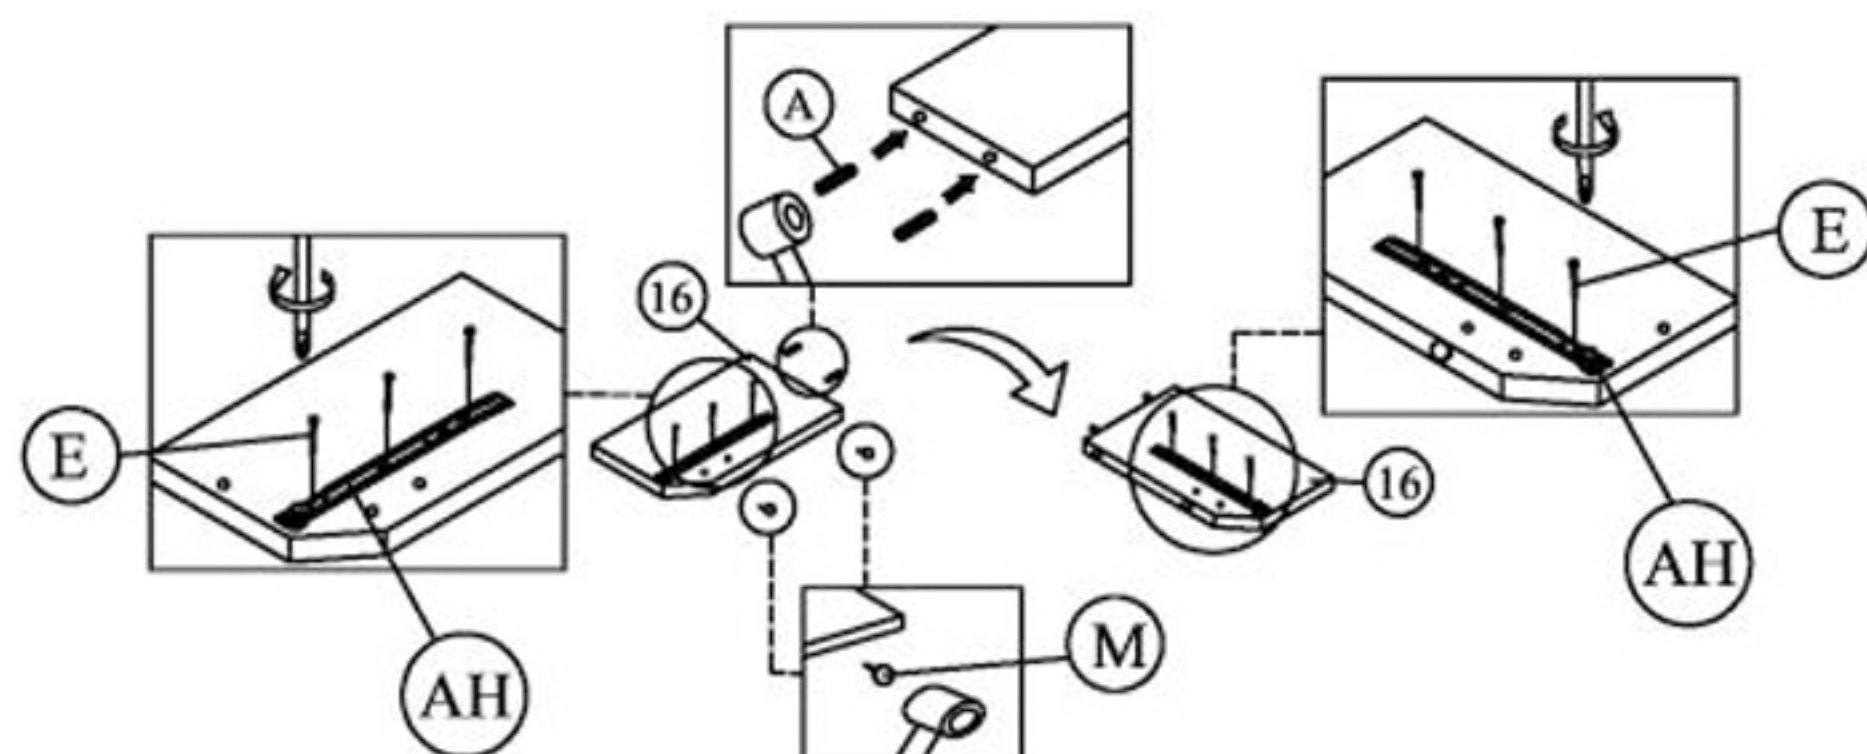


17

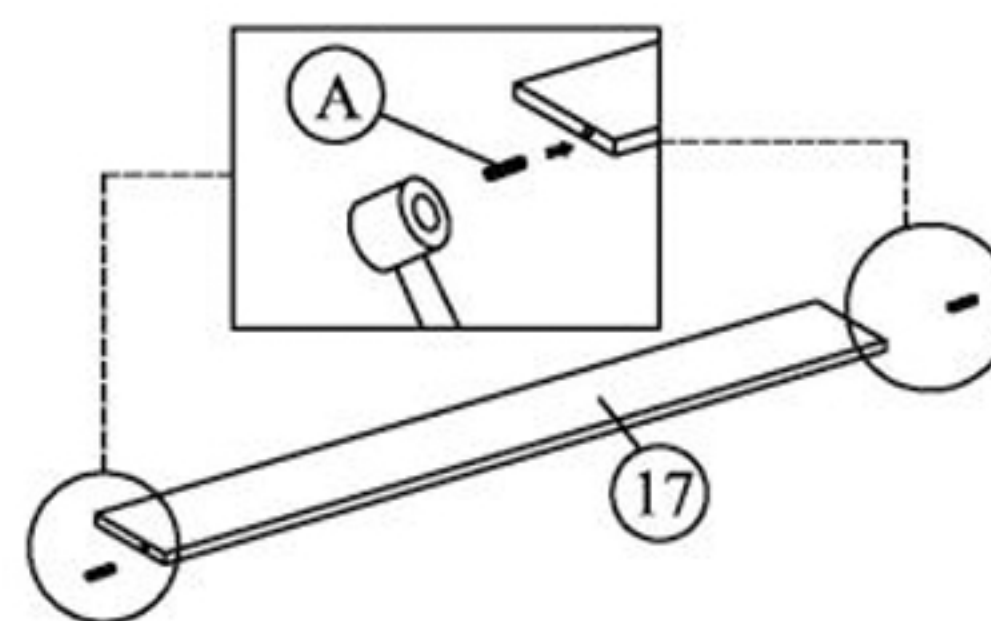


18

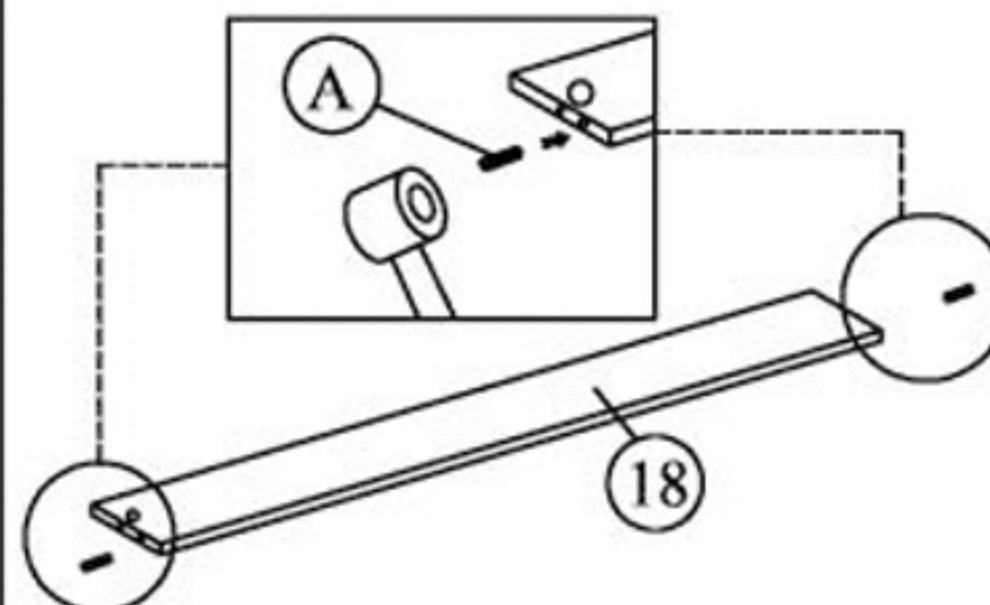


19

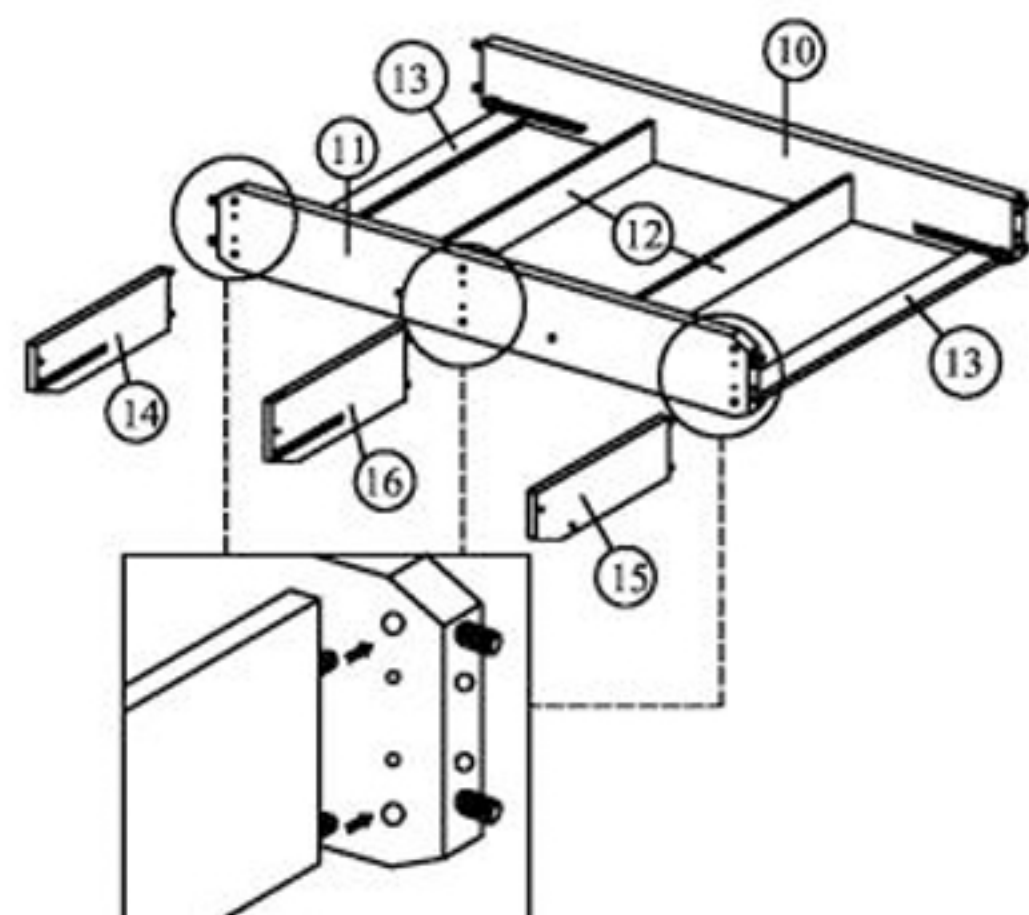


20

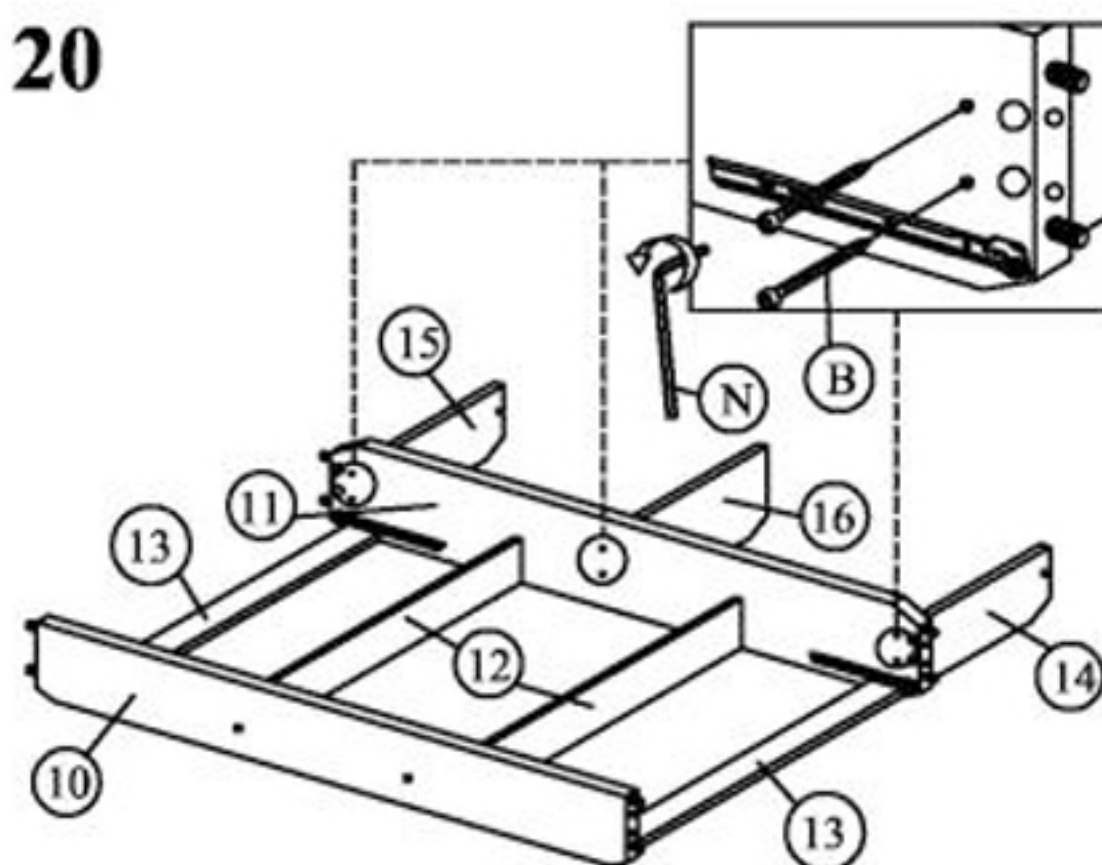


21

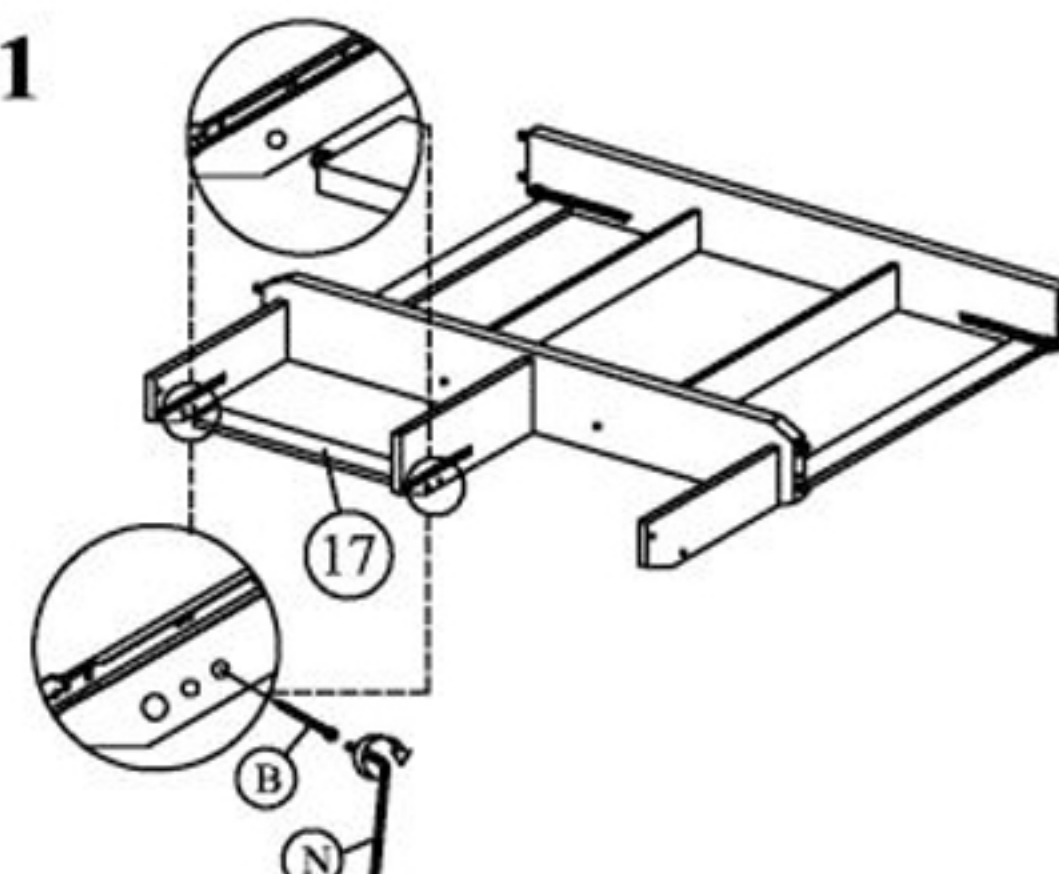


22

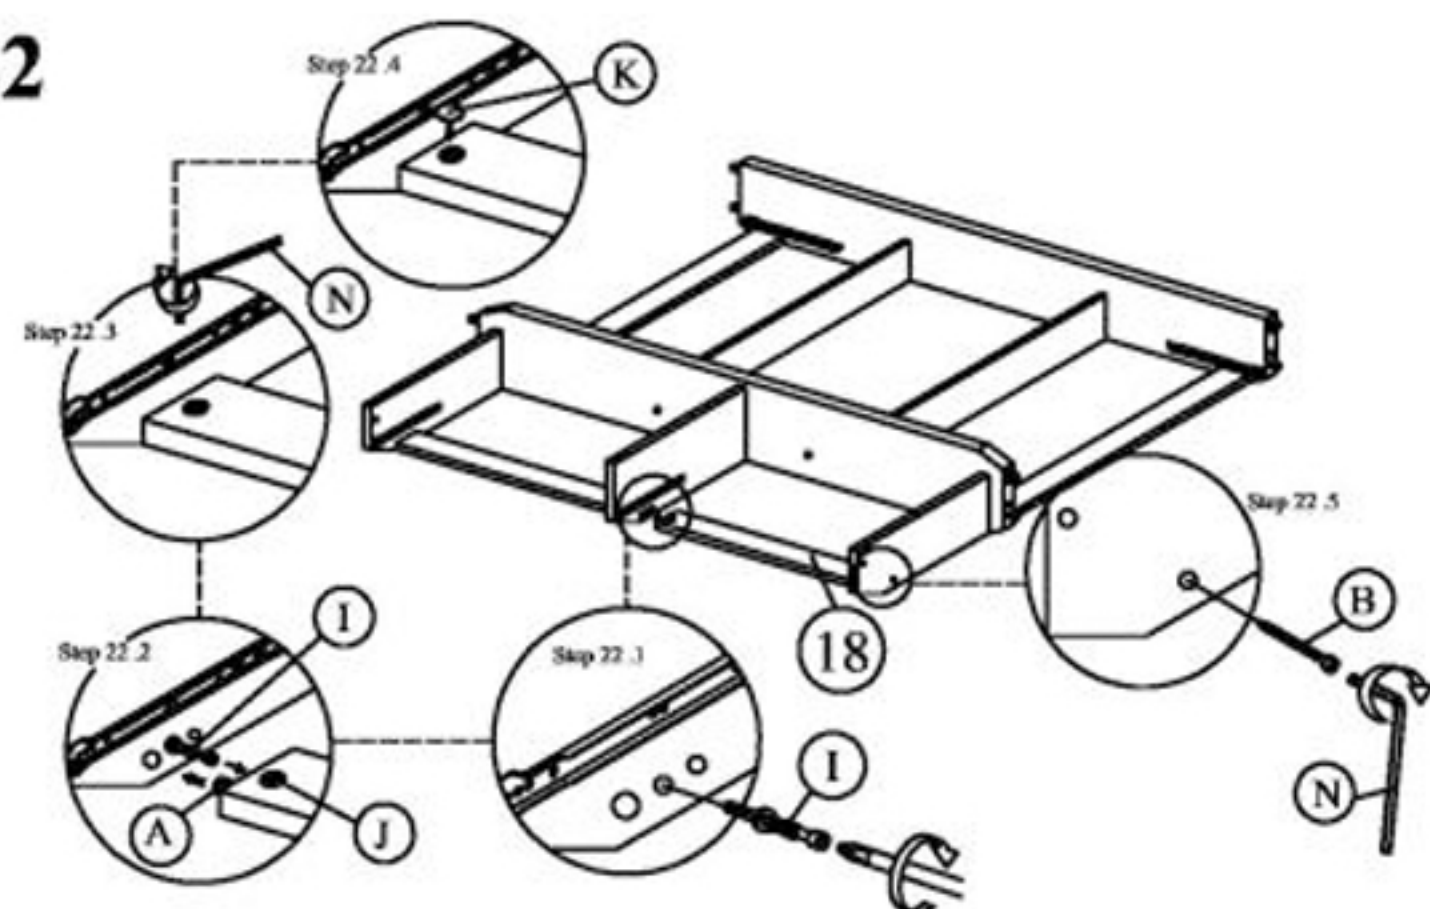


23

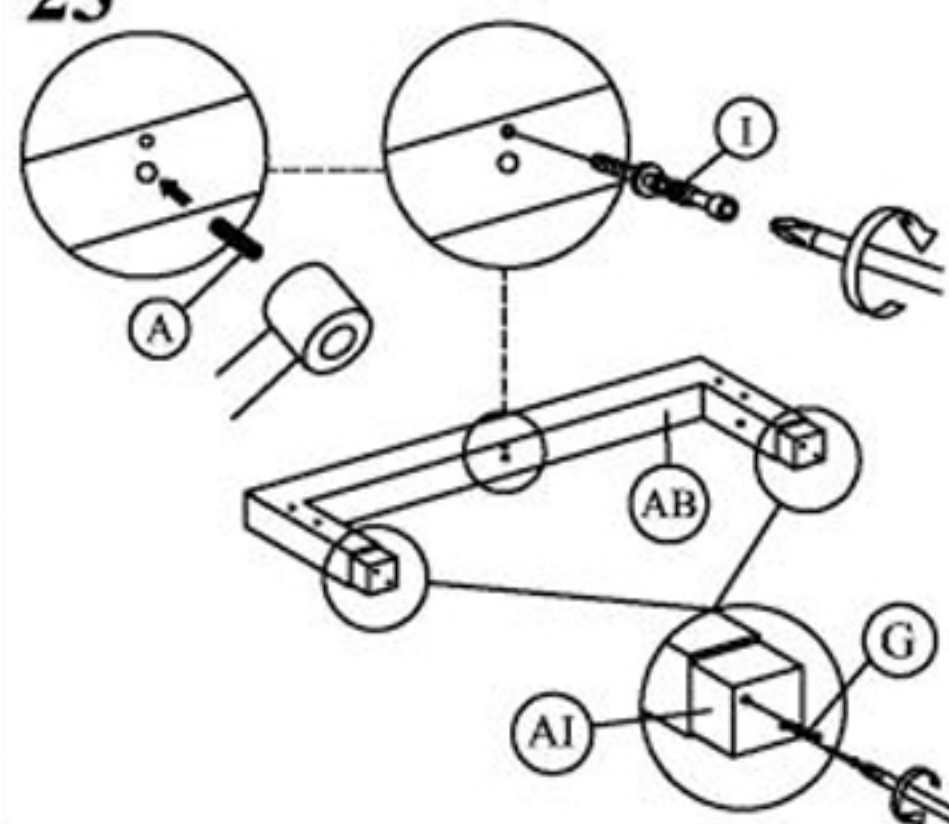


24

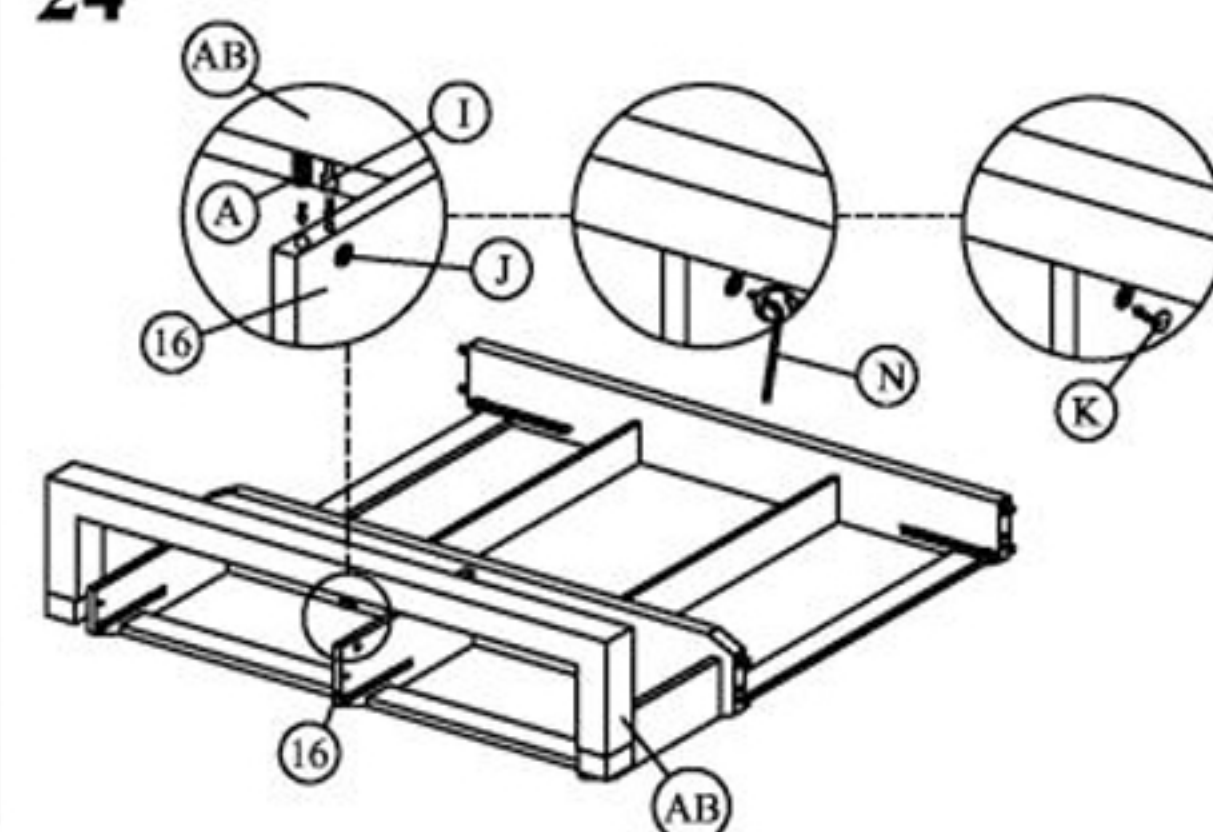


25

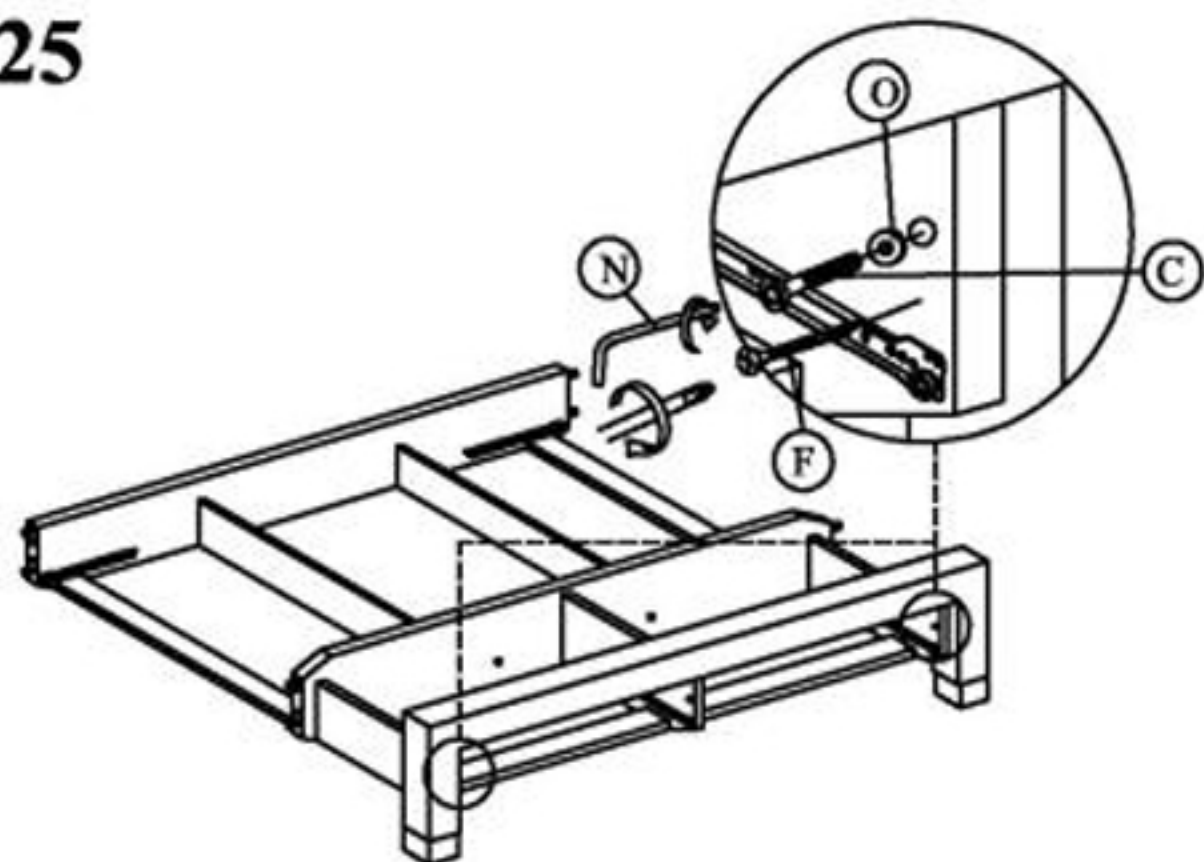


26

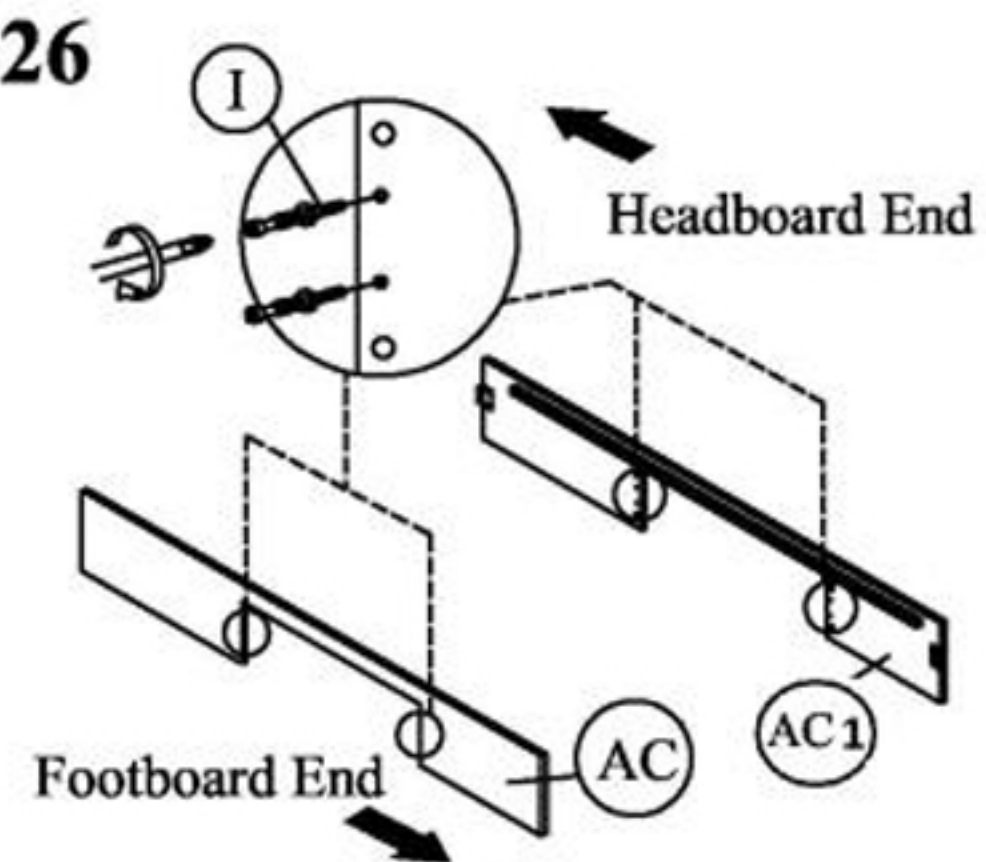

27

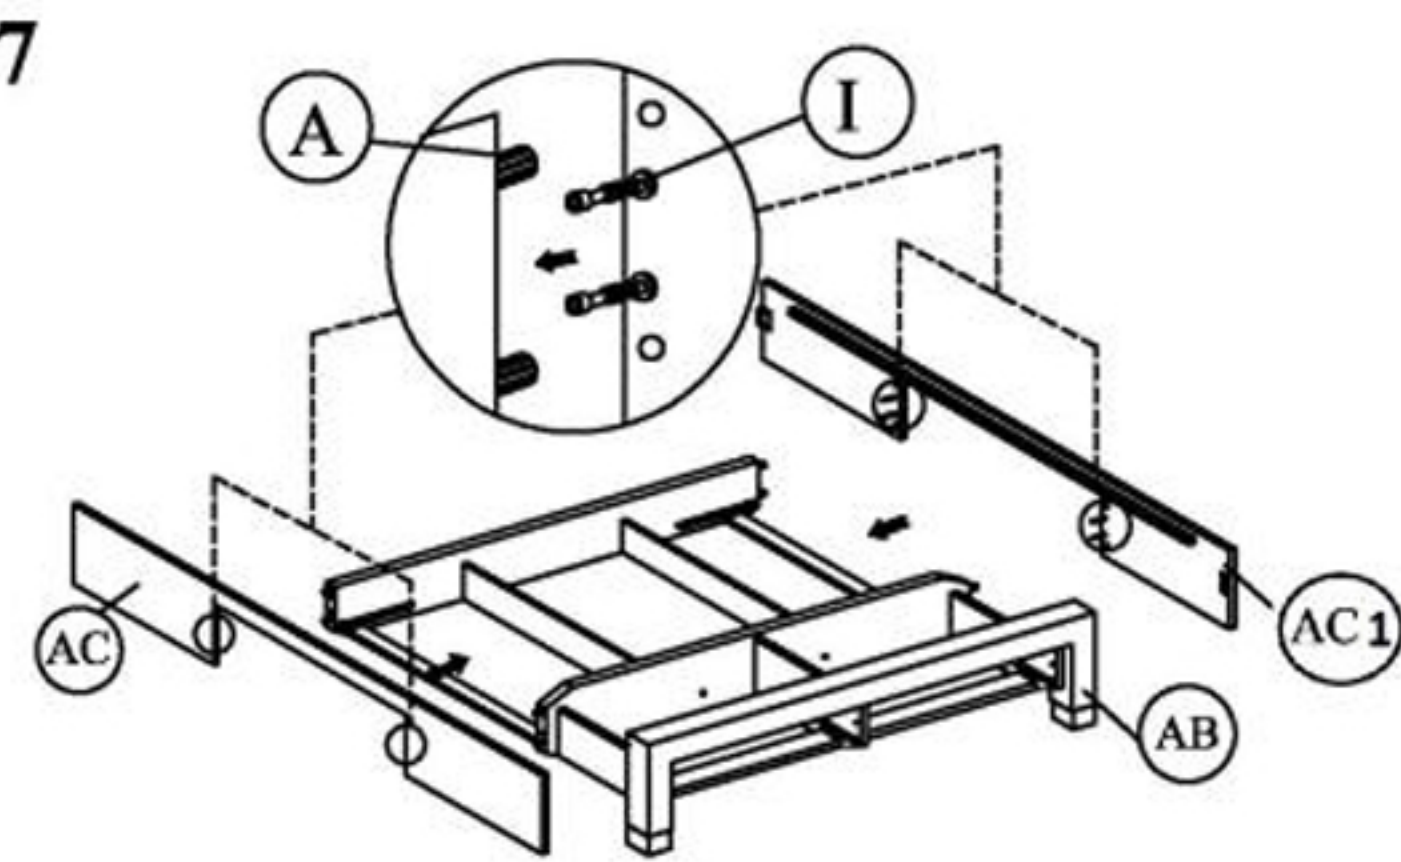

28

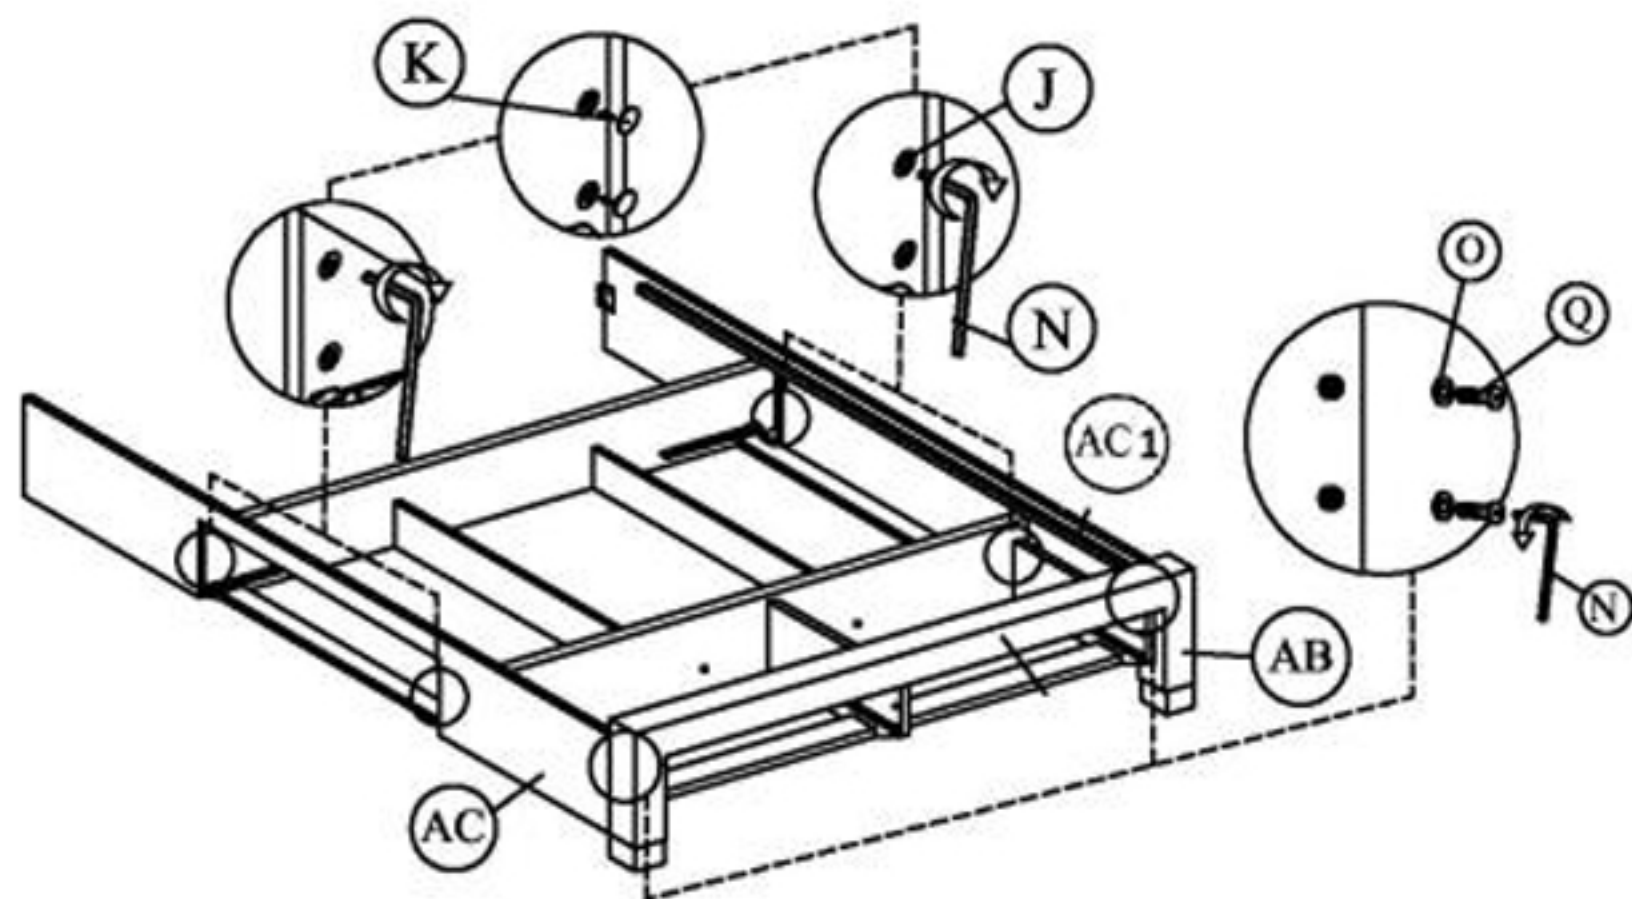

29

